


Stainless Steel Lift-Off Hinge

Stainless Steel Detachable Hinges



DSHHPSL (For Left-hand Use)
DSHHPSR (For Right-hand Use)

DSHHPSLC (For Left-hand Use) (Short Shaft Type)
DSHHPSRC (For Right-hand Use) (Short Shaft Type)

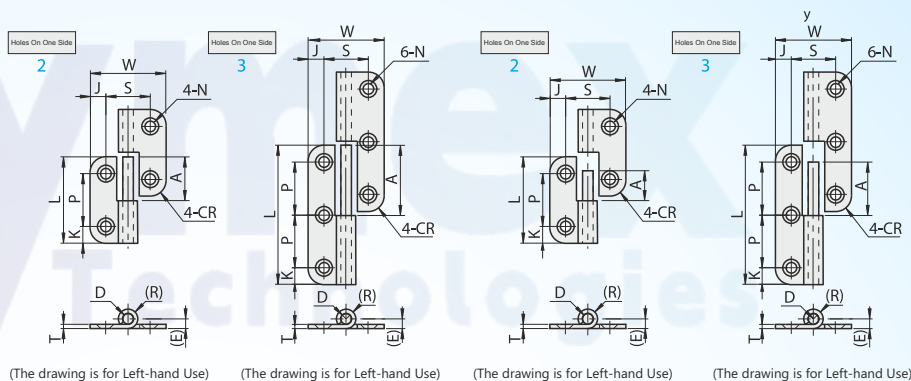


(The drawing is for Left-hand Use) (The drawing is for Left-hand Use) (The drawing is for Left-hand Use) (The drawing is for Left-hand Use)

Part Number		Holes on One Side	*Allowable Load		Mass (g)	L	W	DSHHPSL	DSHHPSLC	K	P	J	S	N		T	(E)	(R)	CR	D
Type	No.		kg	N				DSHHPSR	DSHHPSRC					Through	Countersink					
			A																	
DSHHPSL DSHHPSLC (For Left-hand Use) DSHHPSR DSHHPSRC (For Right-hand Use)	5	2	9	88	34	41	36	19	14	8	25	7.5	21	5.5	8.6 (For M4 Screw)	2	4.6	4.6	4	5
		3	11	108	55	66		31	26											
	6	2	12	117	49	48	48	22	17	9	30	8	32							
		3	15	147	80	78		37	32											
	8	2	25	245	111	59	62	29	24	11	37	10	42	6.5	10.6 (For M5 Screw)	3	6.1	6.1	5	6
		3	38	372	185	96		47	42											
	845	2	30	294	162	70	80	34	29	13.5	43	16.5	47							
		3	40	392	266	113		56	51											


Basic Specifications

- **Main Body Type** : Detachable Hinges
- **Mounting Screw Hole Type** : Countersink
- **Mounting Method** : Screw Mounting
- **Detachable, Flag Hinge Type** : Standard


Example

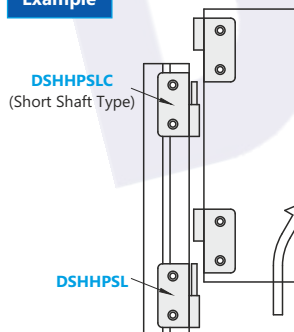

1. Remove the panel from the frame.

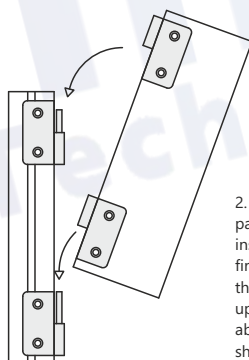

2. When installing the panel into the frame, insert the lower hinge first since the shaft of the other hinge (the upper hinge in the above drawing) is the shorter.

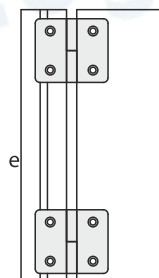

3. Installing and removing the panel is easy since the panel is firstly positioned by the lower hinge, and then is inserted into the upper hinge.

